



3,5 MHz DIRECTION FINDING RECEIVER

SUPERFOX 3,5GX

instruction manual



Jiří Mareček, OK2BWN
CZ-664 01 Bílovice nad Svitavou, Obřanská 593
phone +420 602531222, phone/fax +420 545227041
e-mail: marecek@sky.cz, <http://www.marecek.sky.cz>

FOREWORD

The SUPERFOX 3,5GX direction finding receiver is a modern sports equipment intended for top competitors. Its ergonomical solution results from the following features: low weight and small size, all receiver controllable by single hand even in full run, shock-resistant, waterproof house and low price. The symmetrical double ferrite antenna provides sharp direction pattern, high receiver sensitivity and high front-to-rear ratio. Crystal IF filter provides excellent selectivity of the receiver.

The SUPERFOX 3,5GX receiver is used by many top competitors and their outstanding results prove the quality of the receiver.

FEATURES:

- ***Ergonomical solution – single hand controllable***
- ***High sensitivity and selectivity***
- ***Optimized antenna with sharp direction pattern and high front-to-rear ratio***
- ***Sensitivity control range 120 dB in 8 steps per 15 dB***
- ***Shock-resistant, waterproof house***
- ***Low weight (350g) and small size***

IMPORTANT!

READ ALL INSTRUCTIONS carefully and completely before using the receiver.


SAVE THIS INSTRUCTION MANUAL for future reference. This manual contains important operating instructions for the **SUPERFOX 3,5GX**.

PRECAUTIONS

- ! NEVER** apply AC or any voltage higher than 16V DC to the receiver. This could cause a fire or ruin the receiver.
- ! NEVER** use other charger than the one supplied by the manufacturer. This can ruin the accumulator or even the whole receiver.
- AVOID** using or placing the receiver in areas with temperatures below -20°C or above +60°C.
Use only accessories supplied by the manufacturer.


5 TECHNICAL INFORMATION

Receiver connector pin-out:

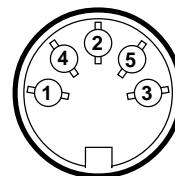

- | | |
|-----|--------------------------|
| 1,3 | headphones output |
| 2 | common ground |
| 4 | accumulator (+ pole) |
| 5 | receiver supply (+ pole) |

Headphones connector pin-out:

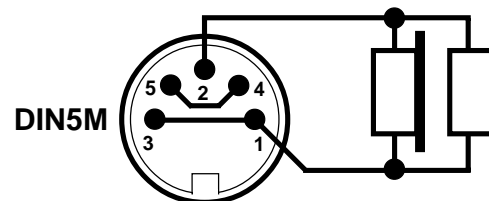

- | | |
|-----|------------|
| 1,3 | headphones |
| 2 | headphones |
| 4-5 | connected |

6 WARRANTY, SERVICE

Should this equipment malfunction under normal use, it will be repaired without charge for a period of one year from the date of purchase.

The customer shall not have any claim under this warranty for repair or adjustment expenses if the trouble is caused by improper, rough or careless treatment or mechanical damage, by a fire or other natural calamity or by improper repair or adjustment made by anyone other than manufacturer.

The warranty does not cover the accumulators.

After the first year of use manufacturer offers the free of charge adjustment and check of the equipment including the recalibration of clock and synthesizer. Any other information, service or modifications are provided by the manufacturer:

**Jiří Mareček, OK2BWN, Obřanská 593, CZ-664 01 Bílovice nad Svitavou
phone/fax +420 545227041, e-mail: marecek@sky.cz**

3 SPECIFICATIONS

Receiver system:	double conversion superheterodyne
Antenna:	symmetrical ferrite and phased whip combined
Front to rear ratio:	> 20 dB
Mode:	CW
Frequency coverage:	3,48 ... 3,71 MHz
Sensitivity (S/N 10 dB):	-135 dBm
IF bandwidth:	1 kHz (-6dB), 6 kHz (-60 dB)
Unwanted sideband rejection:	> 35 dB
Image signal rejection:	> 70 dB
Sensitivity control range :	> 120 dB in 8 steps per 15 dB
Headphones impedance:	> 4 ohms
Supply :	NiMH accumulator 7,2 V / 320 mAh
Consumption (typ.):	18 mA
Operation period :	min. 15 hours
Compass bearing influence :	max. $\pm 2^\circ$
Covering:	IP64
Dimensions (without projections):	100 (W) x 180(H) x 30 (D) mm
Weight:	350 g
Operating temperature range:	-10 ... + 60°C
Storage temperature range:	-20 ... + 60°C

4 OPTIONS

- Automatic charger N28, N80
- Accumulator tester T810
- Headphones SL27, SL28
- Spare whip antenna

CONTENTS

FOREWORD
IMPORTANT
PRECAUTIONS
CONTENTS
UNPACKING

1 RECEIVER OPERATION

- Unpacking
- Before operation
- Turning ON
- GAIN setting
- FREQUENCY setting
- Direction finding
- Antenna pattern expander
- Accumulator voltage indicator

2 MAINTENANCE

- Charging
- Cleaning

3 SPECIFICATIONS

4 OPTIONS

5 TECHNICAL INFORMATION

6 WARRANTY, SERVICE

UNPACKING

Accessories included with the SUPERFOX 3,5GX:

- whip antenna
- protecting case
- this manual

1 OPERATION


■ Unpacking

After unpacking, check carefully the receiver and all accessories included. In the case of any damage do not use the receiver and contact immediately the manufacturer.

■ Before operation

Check the accumulator voltage (by means of T810 tester). If necessary, charge the accumulator.

Mount the whip antenna to the terminal on the top side of the receiver.

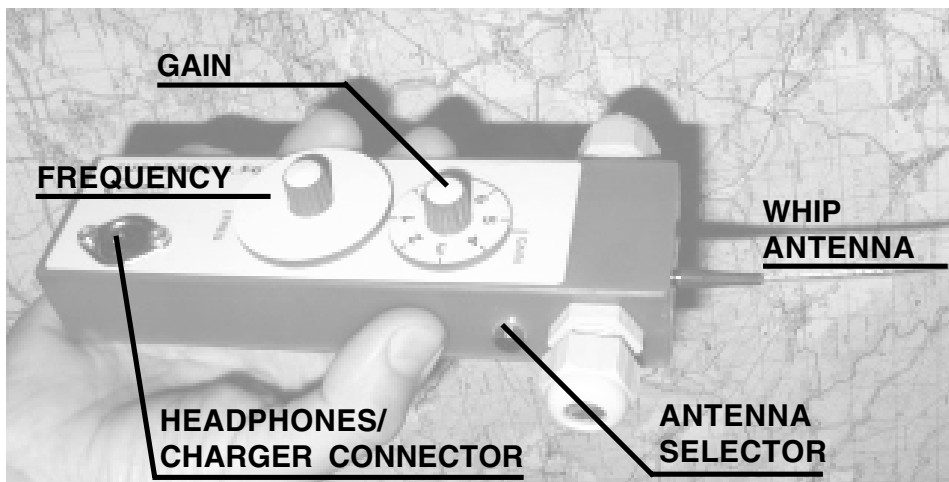

■ Turning ON

Receiver is turned ON by connecting headphones.

■ GAIN setting

From the beginning, set the full gain (position 7). After the signal is tuned, adjust the gain so that the signal in headphones is clearly audible, but not stunning.

NOTE. : With some experience, you will be able to estimate the transmitter distance from the GAIN button position. For example, with GAIN in position 3, the distance to the transmitter is some 100 m.


■ FREQUENCY setting

The receiver is tuned by means of the FREQ button, to the signal beat. Set the tone to the comfortable pitch.

The receiver is equipped with the crystal IF filter, which rejects effectively the unwanted sideband. However, receiving very strong signal, the unwanted sideband may be audible as well. Tune always to the stronger sideband.

■ Antenna selector

The antenna direction patterns are selected by means of the button on the side of the receiver. If the button is released, the direction pattern is „eight“ shaped (only ferrite antenna works). If the button is pushed, the pattern is „cardioid“ shaped (both ferrite and whip antennas work). The direction patterns orientation is usual:

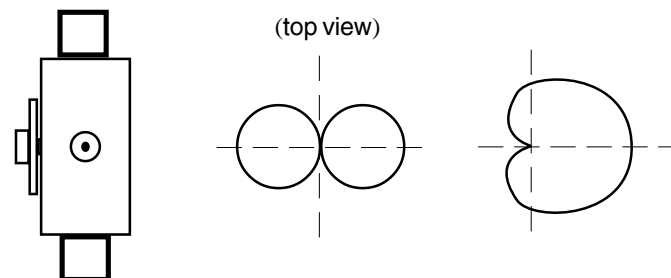

■ Direction finding

Hold the receiver in one hand, always in vertical position, antenna selector released. By turning the receiver or the whole body, try to find the weakest signal. Now the lengthwise axis of the receiver aims to the transmitter. Then push and hold the antenna selector and rotate the receiver by 90° rightwards and leftwards. One of these positions will produce significantly stronger signal, showing the right orientation of the direction to the transmitter.

Avoid large metal objects in the terrain, which can deform the field in their vicinity and therefore the direction taking as well.

2 MAINTENANCE

■ Charging

The receiver can be used until the voltage is above 6,5V. The charging period of the built-in accumulator is 15 hours (using N28 charger). Usually it is not necessary to recharge the receiver after every training. Full discharge does not damage the accumulator, but deep discharge (below the 5V) or frequent overcharging shorten the lifetime of the accumulator.

■ Cleaning:

Keep the receiver dry and clean. If the receiver becomes wet, dry it by the clean cloth and let it dry in a room temperature. **Never** use strong heaters!

If the receiver becomes dusty or dirty, clean it with a brush or a dry, soft cloth. **Avoid** the use of strong chemical solvents such as benzine or alcohol.

The receiver needs no maintenance above the mentioned procedures.